

LiftMaster®

REMOTE CONTROLS MODELS 891LM & 893LM

For use with Security+ 2.0® products. All Security+ 2.0 Garage Door Openers have a yellow Learn button and two yellow antennas. The code between the remote control and the receiver changes with each use, randomly accessing over a billion new codes. Refer to your product manual for the location of the learn button.

NOTE: Your product may look different than the products illustrated in this manual.

Single Button Remote Control Model 891LM

Model 891LM



3-Button Remote Control Model 893LM

MODEL 893MAX



WARNING

To prevent possible **SERIOUS INJURY** or **DEATH** from a moving gate or garage door:

- ALWAYS keep remote controls out of reach of children. NEVER permit children to operate, or play with remote control transmitters.
- Activate gate or door **ONLY** when it can be seen clearly, is properly adjusted, and there are no obstructions to gate or door travel.
- ALWAYS keep gate or garage door in sight until completely closed. Never permit anyone to cross path of moving gate or door.





WARNING: This product can expose you to chemicals including lead, which are known to the State of California to cause cancer or birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.


NOTICE: To comply with FCC and/or Industry Canada rules (IC), adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

This device complies with Part 15 of the FCC rules and IC RSS-210. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

PROGRAM USING THE GARAGE DOOR OPENER

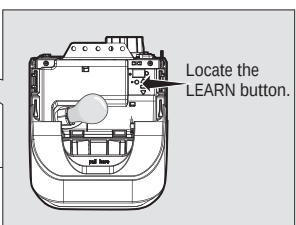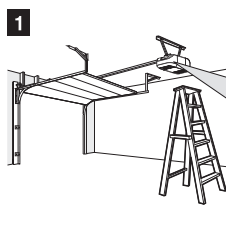1


Locate the LEARN button.

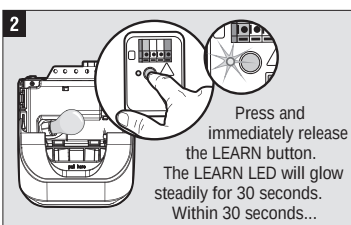2

Press and immediately release the LEARN button. The LEARN LED will glow steadily for 30 seconds. Within 30 seconds...

3

Press and hold the button on the remote control that you wish to use.

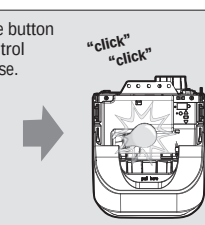


"click"
"click"

Release the button when the garage door opener lights blink or two clicks are heard. If programming to other products, press the button a second time to activate the product.

PROGRAMMING THE REMOTE CONTROL

1


Press the LEARN button on the door control to enter Programming Mode.

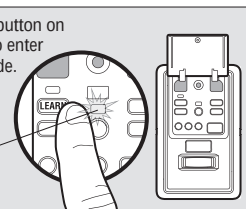

The command LED will flash once.

2



Press the LEARN button again, the LED will flash once.

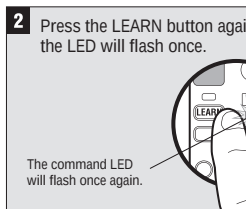

The command LED will flash once again.

3

Press and hold the button on the remote control that you wish to use.

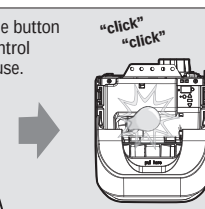
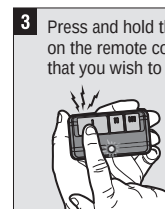


"click"
"click"

Release the button when the garage door opener lights blink or two clicks are heard. If programming to other products, press the button a second time to activate the product.

TO ERASE ALL CODES FROM MEMORY

When deactivating any unwanted remote control code, all previous codes will be erased.

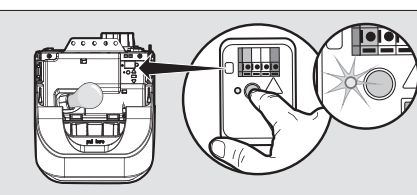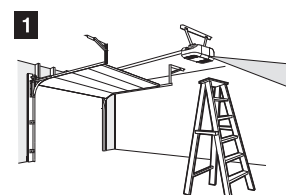
1

Press and hold the LEARN button on garage door opener or other product until the LEARN LED goes out (approximately 6 seconds). All previous codes are now erased. Reprogram each remote control you wish to use.

TO CONTROL THE GARAGE DOOR OPENER LIGHTS

This feature is only available on garage door openers equipped with a multi-function door control and a remote control with more than one button. Not available with external receiver.

A remote control button can be programmed to operate the garage door opener lights without opening the door.

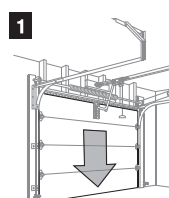1

With the door closed, press and hold the remote control button that you want to control the light.





2

Press and hold the LIGHT button on the door control.



3

Press and hold the LOCK button on the door control.

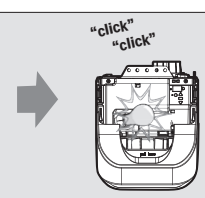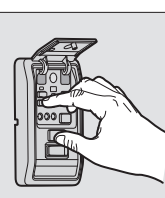

"click"
"click"

After the garage door opener lights flash, release all buttons.

Test by pressing the remote control button. The garage door opener lights should turn on or off but the door should not move.

THE REMOTE CONTROL BATTERY

The 3V CR2032 battery should produce power for up to 3 years. If the battery is low, the remote control's LED will not flash when the button is pressed. To replace battery:

- 1** Pry open the case first in the middle (1), then at each side (2 and 3) with the visor clip.
- 2** Remove the old battery. Dispose of old batteries properly.
- 3** Insert replacement batteries positive side up. Replace the batteries with only 3V CR2032 coin cell batteries.
- 4** Replace cover.

Make: LiftMaster
Model: 891LM, 893LM
Description: Remote Control
Uses 1 3Vdc battery (CR2032)
Country of Origin: Mexico

Remote Control 893LM: IFT #: RCPLI8917-2064
Remote Control 891LM: IFT #: RCPLI8918-0755
Operation of this equipment is subject to the following two conditions: (1) This equipment or device may not cause harmful interference and (2) this equipment or device must accept any interference, including that which may cause undesired operation.

! WARNING


- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Battery Type: CR2032
- Battery Voltage: 3 V
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.


HOW TO USE THE REMOTE CONTROL

Press and hold the button down until the door or gate starts to move. The remote control will operate from up to 3 car lengths away on typical installations. Installations and conditions vary, contact an installing dealer for more information.

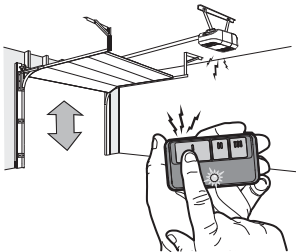

3-BUTTON REMOTE CONTROLS

Additional buttons on the remote control can be programmed to operate up to 3 devices such as additional garage door openers, light controls, gate operators or access control systems.

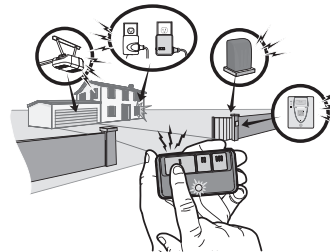

REPLACEMENT PARTS

Visor Clip.....K029B0137

ONE YEAR LIMITED WARRANTY

LiftMaster® ("Seller") warrants to the first retail purchaser of this product, for the residence in which this product is originally installed, that it is free from defects in materials and/or workmanship for a specific period of time as defined below (the "Warranty Period"). The warranty period commences from the date of purchase. For more information, visit www.liftmaster.com/warranty

Contact Us

For additional information or assistance, please visit:

support.chamberlaingroup.com

©2026 The Chamberlain Group LLC

LiftMaster and the LiftMaster logo are trademarks, service marks, and/or registered trademarks of The Chamberlain Group LLC. All rights reserved.
The Chamberlain Group LLC, 300 Windsor Drive, Oak Brook, IL, 60523, United States

À utiliser avec les produits Security+ 2.0®. Tous les ouvre-portes de garage Security+ 2.0 sont équipés d'un bouton jaune LEARN (Apprendre) et de deux antennes jaunes. Le code entre la télécommande et le récepteur change à chaque utilisation, en choisissant de manière aléatoire parmi plus d'un milliard de nouveaux codes. Veuillez consulter le manuel de votre produit pour localiser le bouton d'apprentissage.

REMARQUE : Votre produit peut être différent des produits illustrés dans ce manuel.

Télécommande à un seul bouton, modèle 891LM

Model 891LM




Télécommande à 3 boutons, modèle 893LM


MODEL 893MAX



PROGRAMMATION À L'AIDE DE L'OUVRE-PORTE DE GARAGE

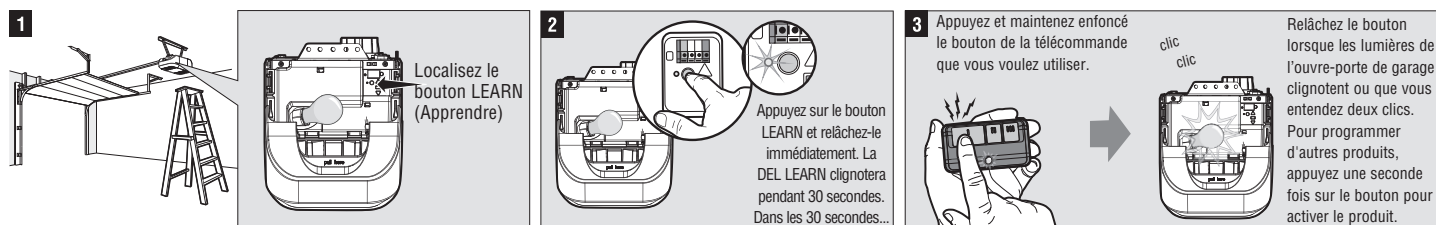


PROGRAMMER LA TÉLÉCOMMANDE

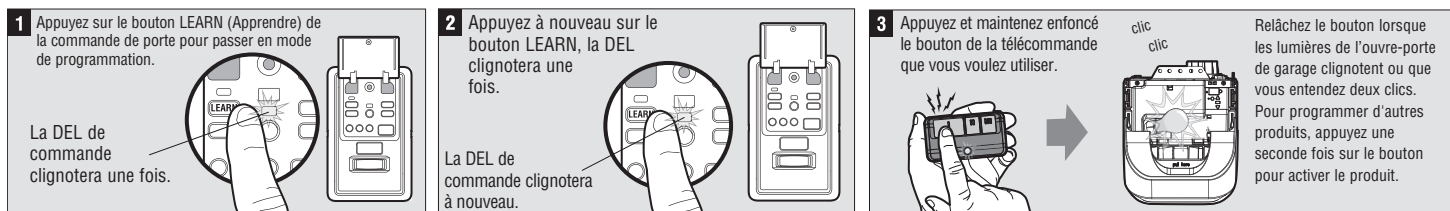

POUR EFFACER TOUS LES CODES DE LA MÉMOIRE


Lors de la désactivation de codes indésirables, tous les codes précédents seront supprimés.

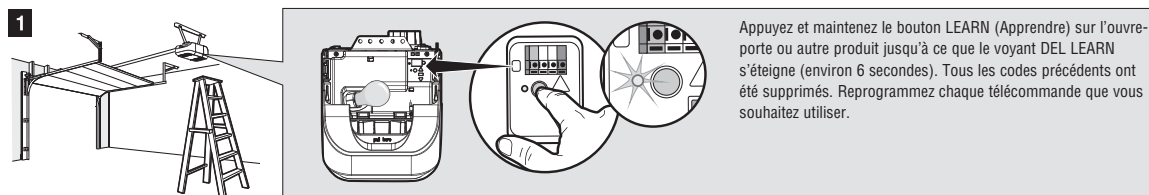

POUR COMMANDER L'ÉCLAIRAGE DE L'OUVRE-PORTE DE GARAGE

Cette fonctionnalité est uniquement disponible sur les ouvre-portes de garage équipés d'une commande de porte multifonction et d'une télécommande à plusieurs boutons. Non disponible avec un récepteur externe.

Un bouton de la télécommande peut être programmé pour actionner l'éclairage de l'ouvre-porte de garage sans ouvrir la porte.

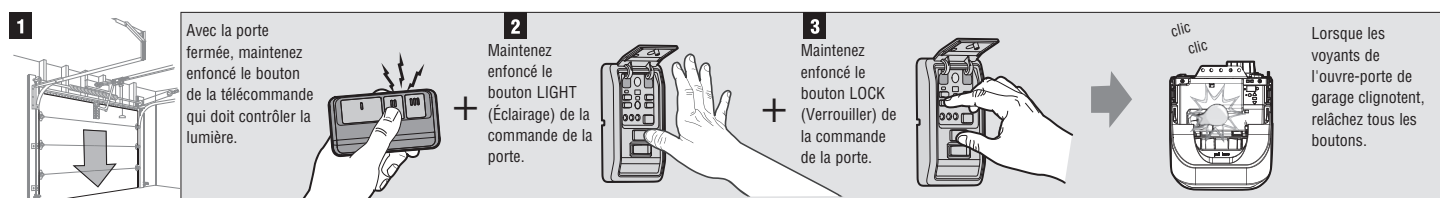



Testez en appuyant sur le bouton de la télécommande. Les lumières de l'ouvre-porte de garage devraient s'allumer ou s'éteindre sans que la porte ne bouge.


PILE DE LA TÉLÉCOMMANDE


La pile CR2032 de 3 V devrait fonctionner pendant une durée maximale de 3 ans. Si la batterie est faible, la DEL de la télécommande ne clignotera pas lorsque le bouton est enfoncé. Pour remplacer la pile :

- 1** Commencez par ouvrir le boîtier au milieu (1), puis de chaque côté (2 et 3) avec la pince du pare-soleil.

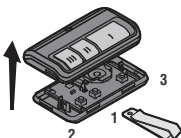
- 2** Retirez l'ancienne pile. Jetez les piles usagées de façon appropriée.

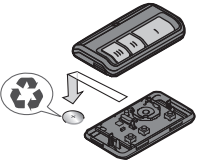
- 3** Insérez les piles de remplacement avec le côté positif vers le haut. Remplacez la pile uniquement par des piles boutons CR2032 de 3 V.


- 4** Réinstallez le couvercle.

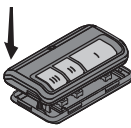

Marque : LiftMaster
Modèle : 891LM, 893LM
Description : Télécommande
Utilise 1 pile de 3 Vcc (CR2032)
Pays d'origine : Mexique

Télécommande 893LM : N° IFT : RCPLI8917-2064
Télécommande 891LM : N° IFT : RCPLI8918-0755

L'utilisation de ce matériel est assujettie aux deux conditions suivantes : (1) cet appareil et équipement ne doit pas causer d'interférences nuisibles, et (2) cet appareil ou équipement doit accepter toutes les interférences reçues, y compris les interférences qui peuvent causer un fonctionnement indésirable.

⚠ AVERTISSEMENT


- RISQUE EN CAS D'INGESTION : Ce produit contient une pile bouton.
- Son ingestion peut entraîner la MORT ou des blessures graves.
- L'ingestion d'une pile bouton peut provoquer des brûlures chimiques internes en moins de deux (2) heures.
- GARDEZ les piles neuves et usagées HORS DE PORTÉE DES ENFANTS.
- Consultez immédiatement un médecin si vous soupçonnez qu'une pile a été avalée ou insérée dans une partie du corps.



- Retirez les piles usagées et recyclez-les immédiatement ou mettez-les au rebut conformément aux réglementations locales et tenez-les hors de portée des enfants. Ne jetez pas les piles dans les ordures ménagères et ne les incinerez pas.
- Les piles, même usagées, peuvent causer des blessures graves, voire mortelles.
- Appelez un centre antipoison local pour obtenir des renseignements sur le traitement.
- Type de pile : CR2032
- Tension de la pile : 3 V
- Les piles non rechargeables ne doivent pas être rechargées.
- Ne les déchargez pas de force, ne les rechargez pas, ne les démontez pas, ne les chauffez pas au-delà de la température nominale spécifiée par le fabricant et ne les incinerez pas. Cela pourrait entraîner des blessures dues aux émanations, aux fuites ou à une explosion entraînant des brûlures chimiques.
- Assurez-vous que les piles sont installées correctement en respectant la polarité (+ et -).
- Ne mélangez pas des piles usagées et des piles neuves, ni des marques ou des types de piles différents, tels que des piles alcalines, des piles au carbone-zinc ou des piles rechargeables.
- Retirez et recyclez ou éliminez immédiatement les piles des équipements non utilisés pendant une période prolongée, conformément aux réglementations locales.
- Refermez toujours complètement le compartiment à piles. Si le compartiment à piles ne se referme pas correctement, cessez d'utiliser le produit, retirez les piles et tenez-les hors de portée des enfants.


COMMENT UTILISER LA TÉLÉCOMMANDE

Maintenez le bouton enfoncé jusqu'à ce que la porte ou le portail commence à bouger. La télécommande fonctionnera jusqu'à une distance équivalente à trois longueurs de voiture dans les installations ordinaires. Les installations et les conditions peuvent varier, contactez un installateur agréé pour obtenir plus d'informations.

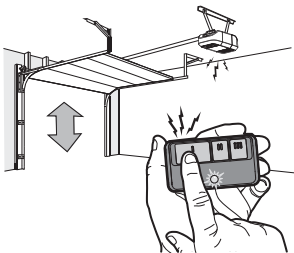

TÉLÉCOMMANDES À 3 BOUTONS

Les boutons supplémentaires de la télécommande peuvent être programmés pour commander jusqu'à trois appareils supplémentaires, tels que des ouvre-portes de garage, l'éclairage, des opérateurs de portail ou des systèmes de contrôle d'accès.

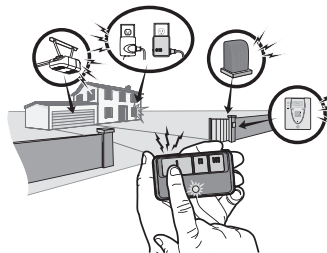

PIÈCES DE RECHANGE

Pince pour pare-soleil.....K029B0137

GARANTIE LIMITÉE D'UN AN

LiftMaster®/LiftMaster® (le « Vendeur ») garantit au premier acheteur au détail que ce produit installé pour la première fois dans sa résidence est sans défaut de matériel, de main-d'œuvre pendant la période précise définie ci-dessous (« Période de la garantie »). La période de garantie commence à la date d'achat. Pour plus de renseignements, rendez-vous sur le site www.liftmaster.com/warranty

Nous contacter

Pour plus d'informations ou pour obtenir de l'aide, veuillez consulter :

support.chamberlaingroup.com

© The Chamberlain Group LLC, 2026

LiftMaster et le logo LiftMaster sont des marques de commerce, des marques de service ou des marques déposées de The Chamberlain Group LLC. Tous droits réservés.
The Chamberlain Group, LLC 300, Windsor Drive Oak Brook, IL, 60523, États-Unis